


**BACK PANEL**

**A 1**

**BOTTOM INTERIOR GUSSET SUPPORT**

**B 1**

**A 2**

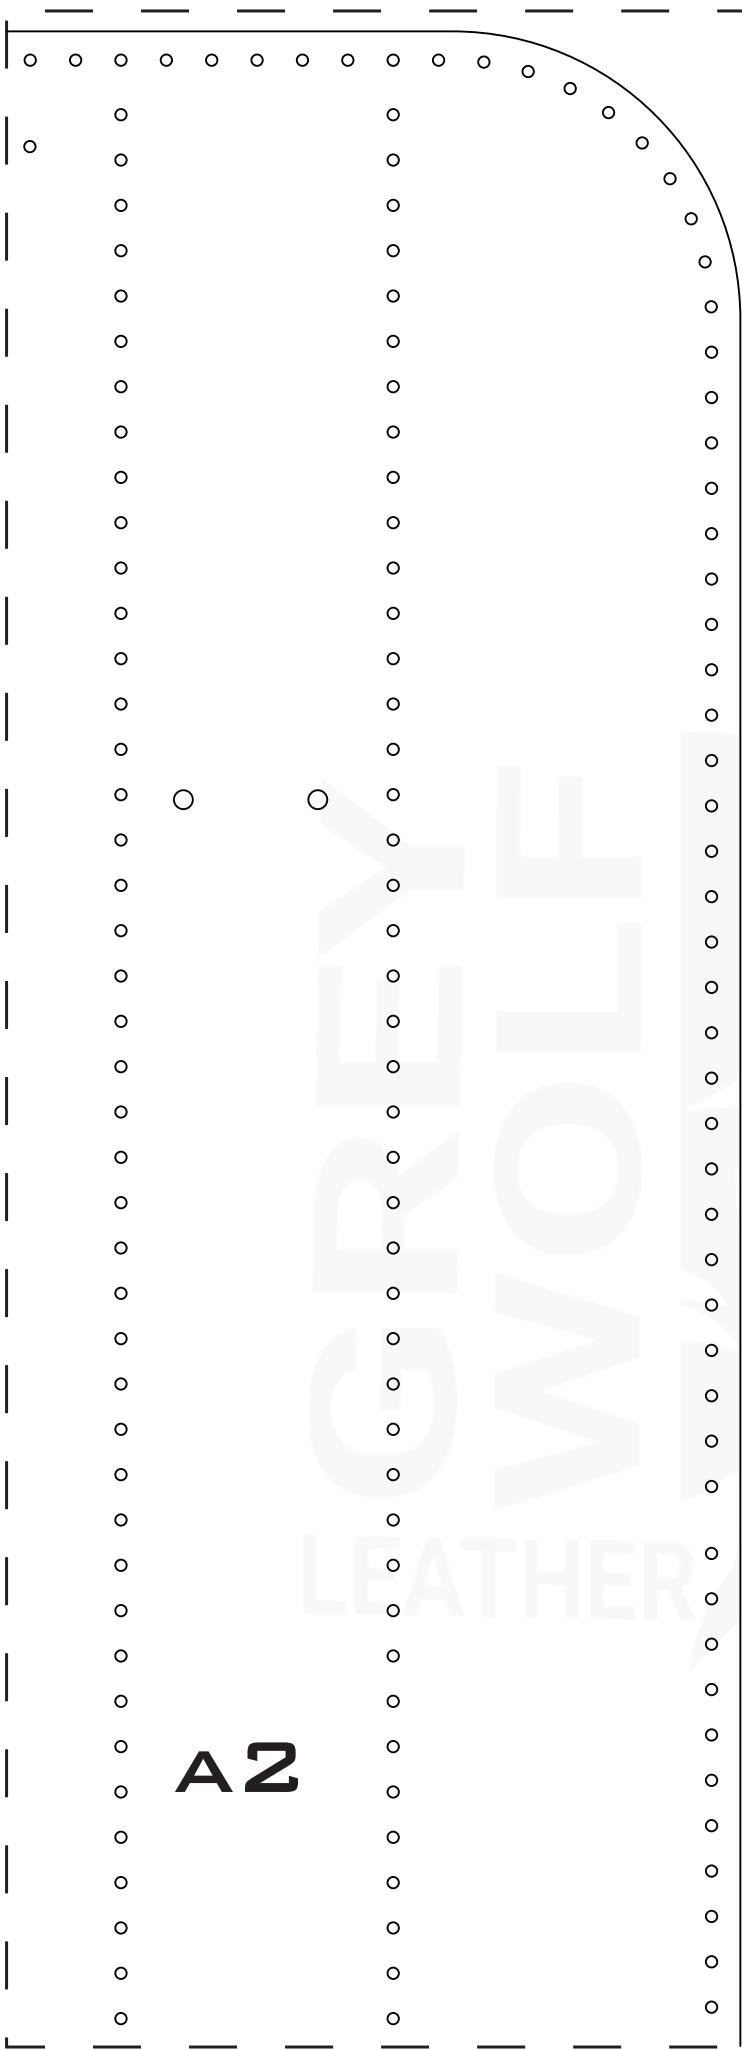

**FRONT PANEL**


**C 1**




**20", ZIPPER**


**D 1**

**C 2**

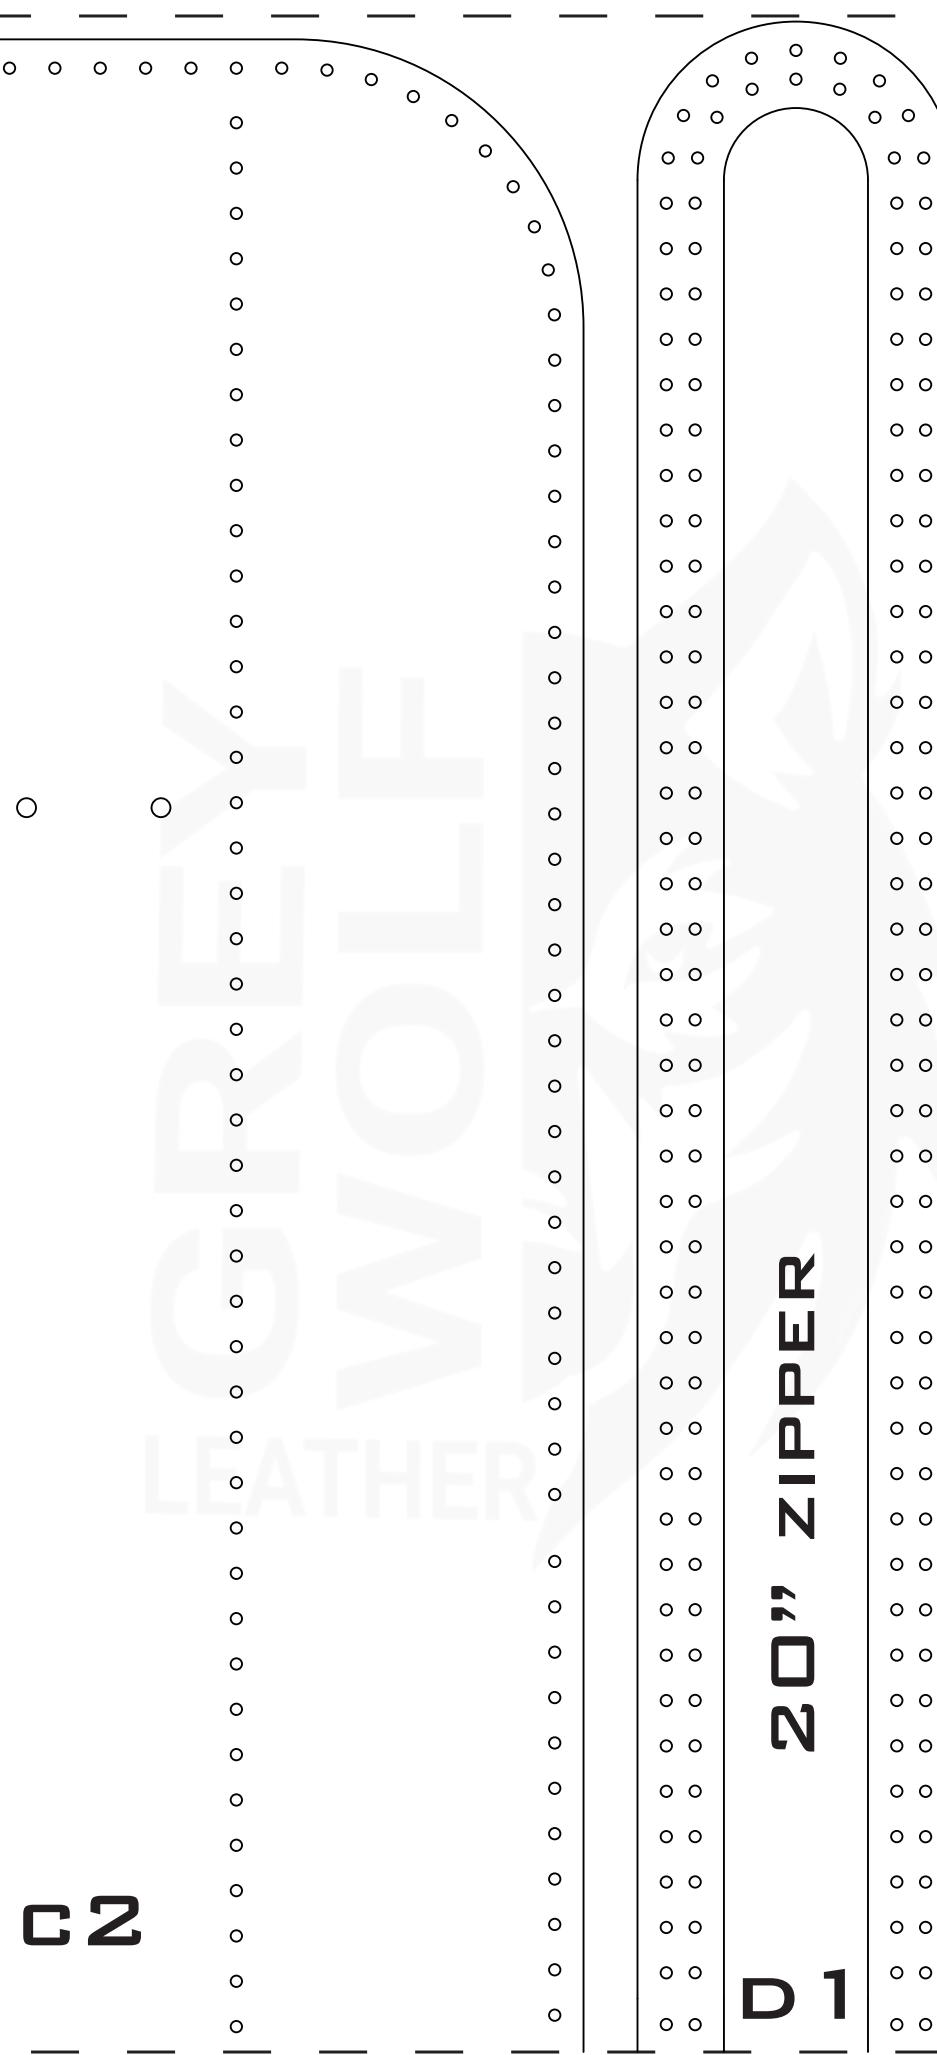


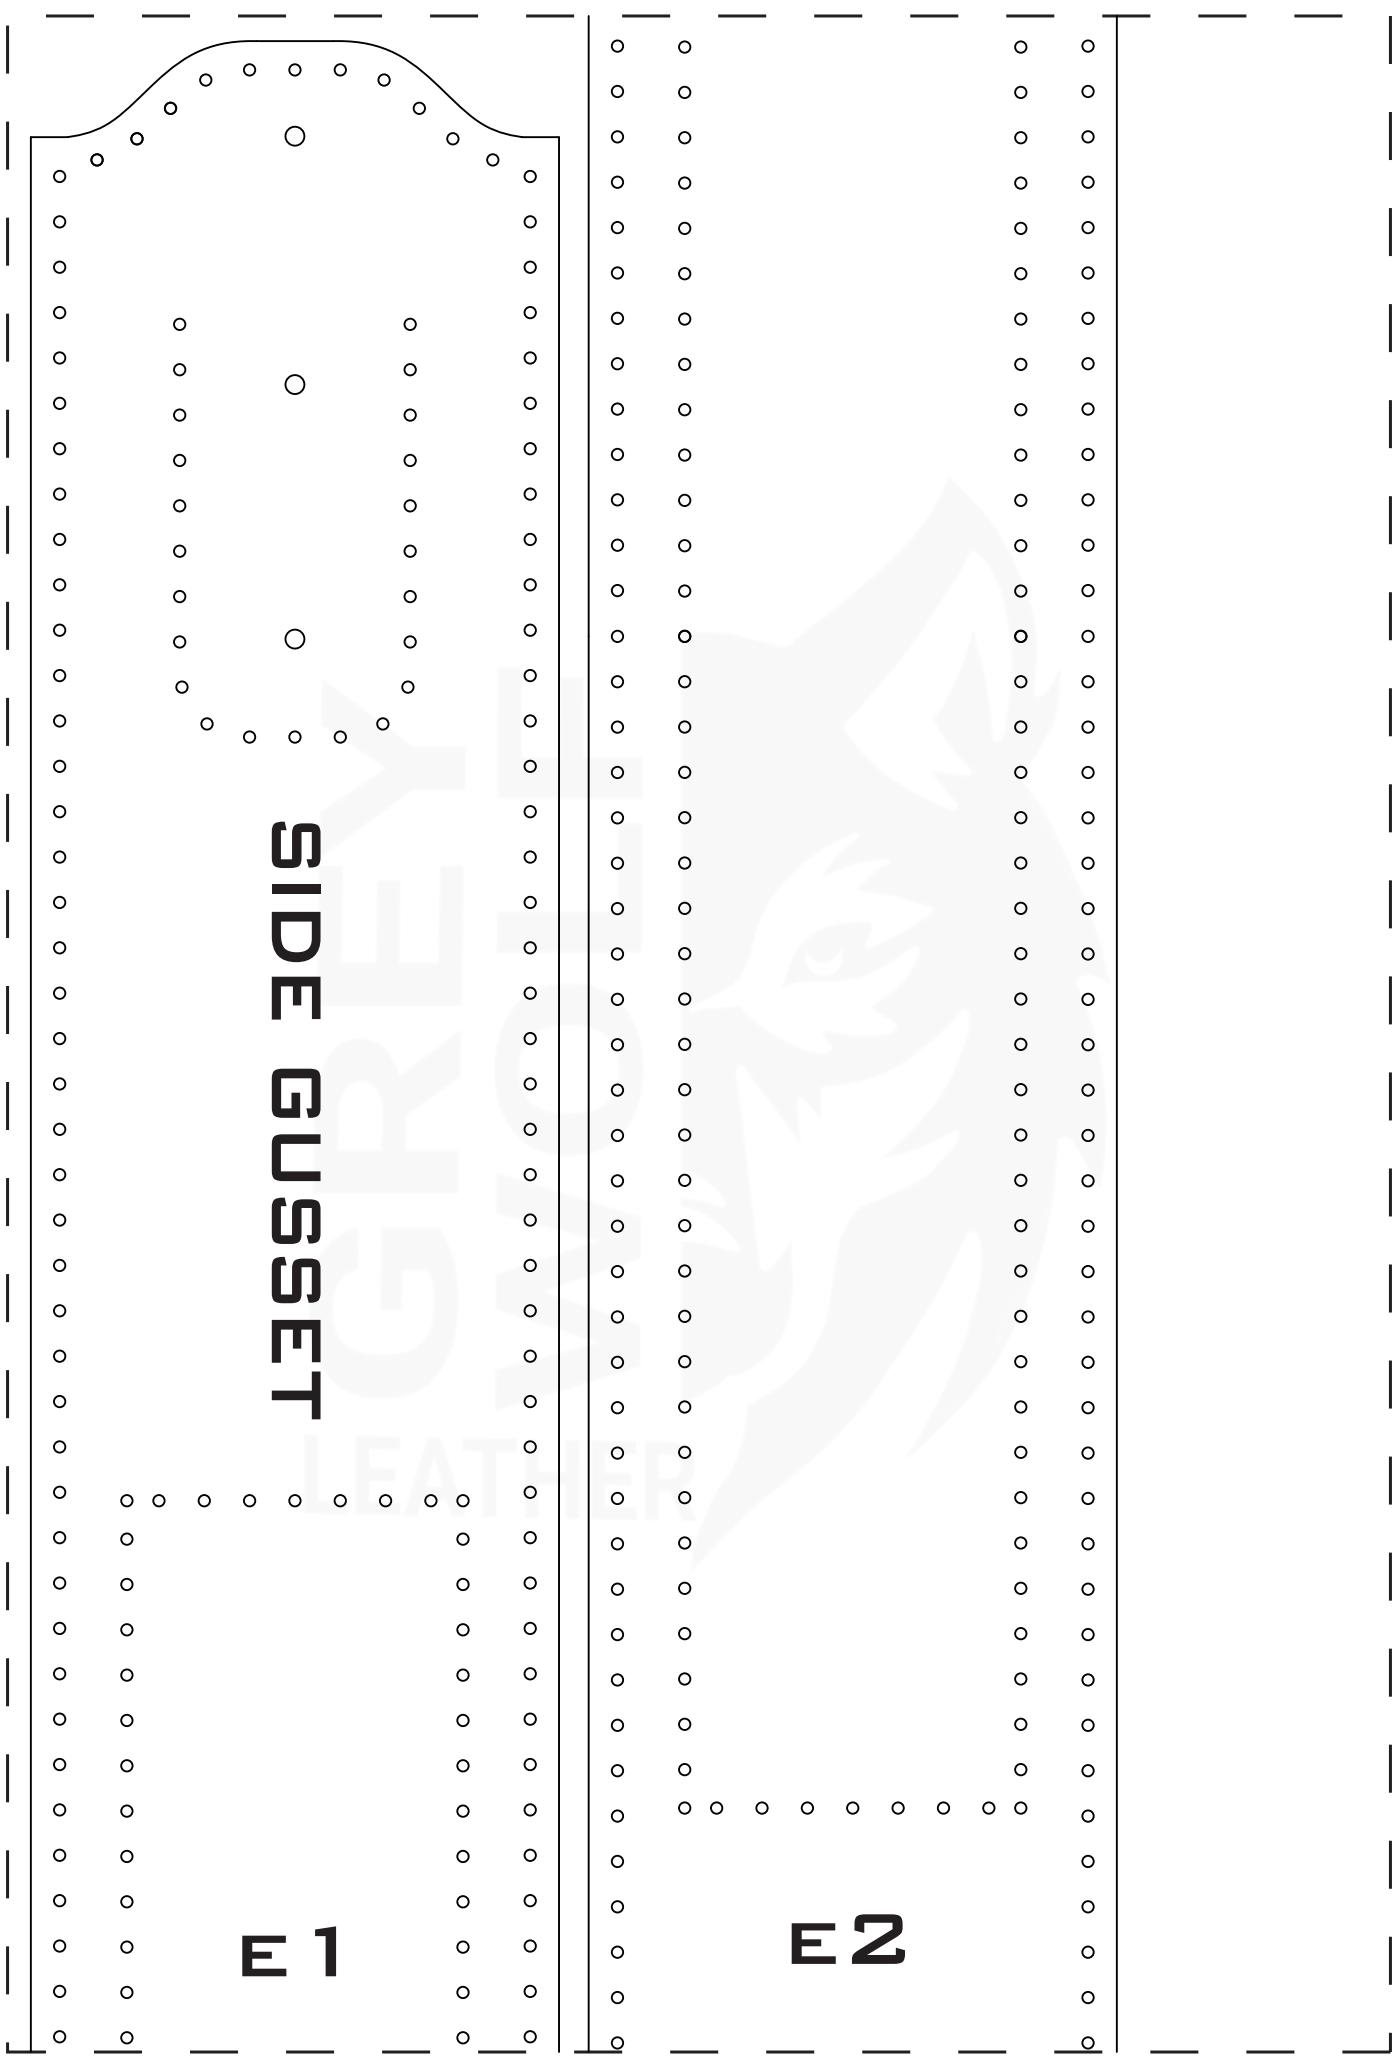

**E3**

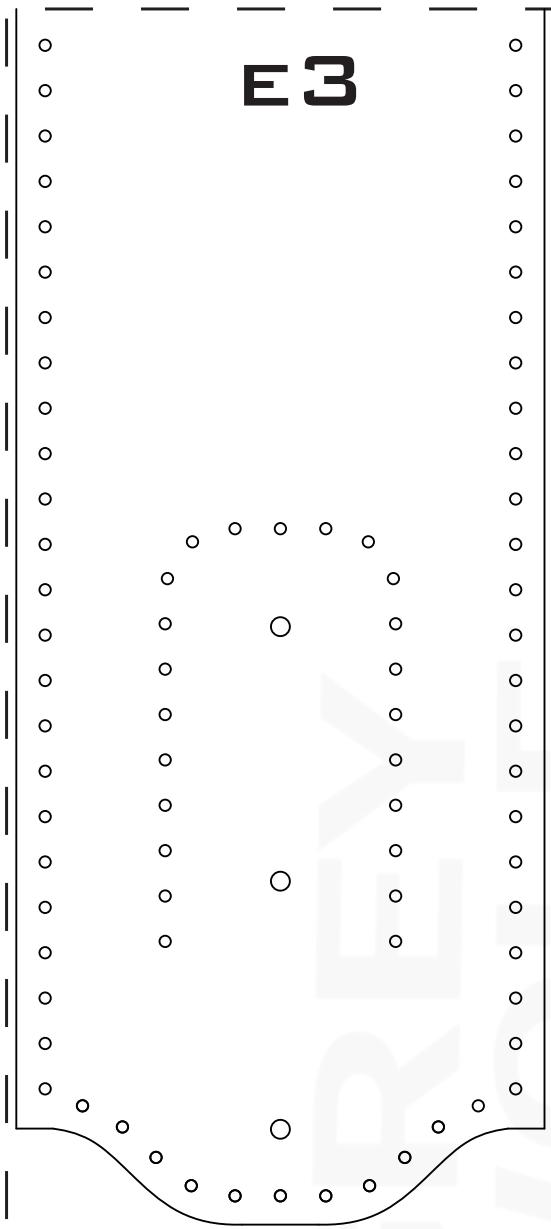


**F2**

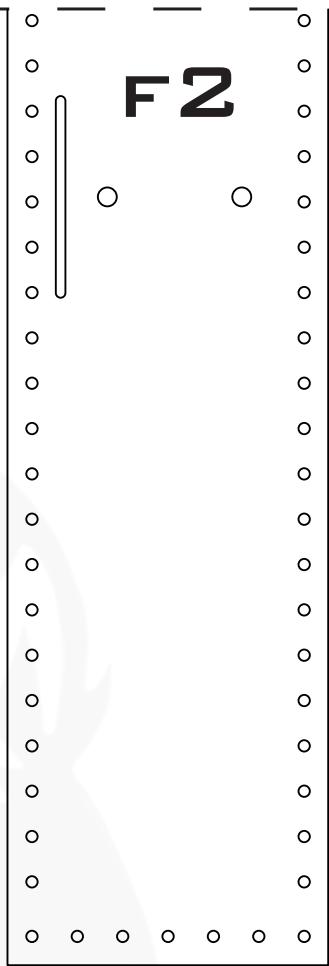


**BAG FACE STRAP SUPPORT**


**F 1**

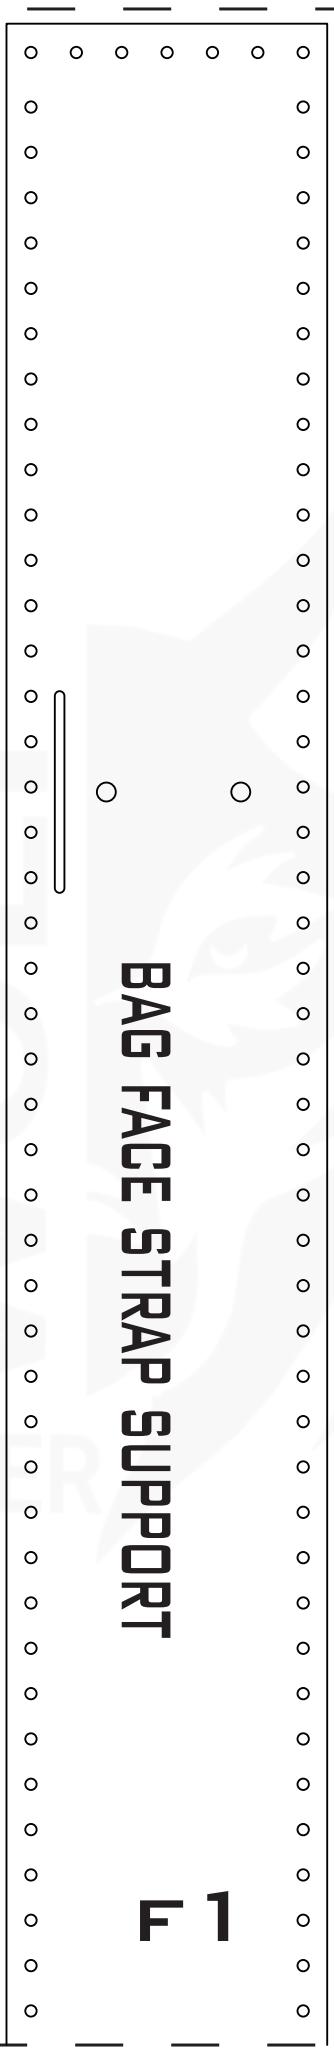

**A3**

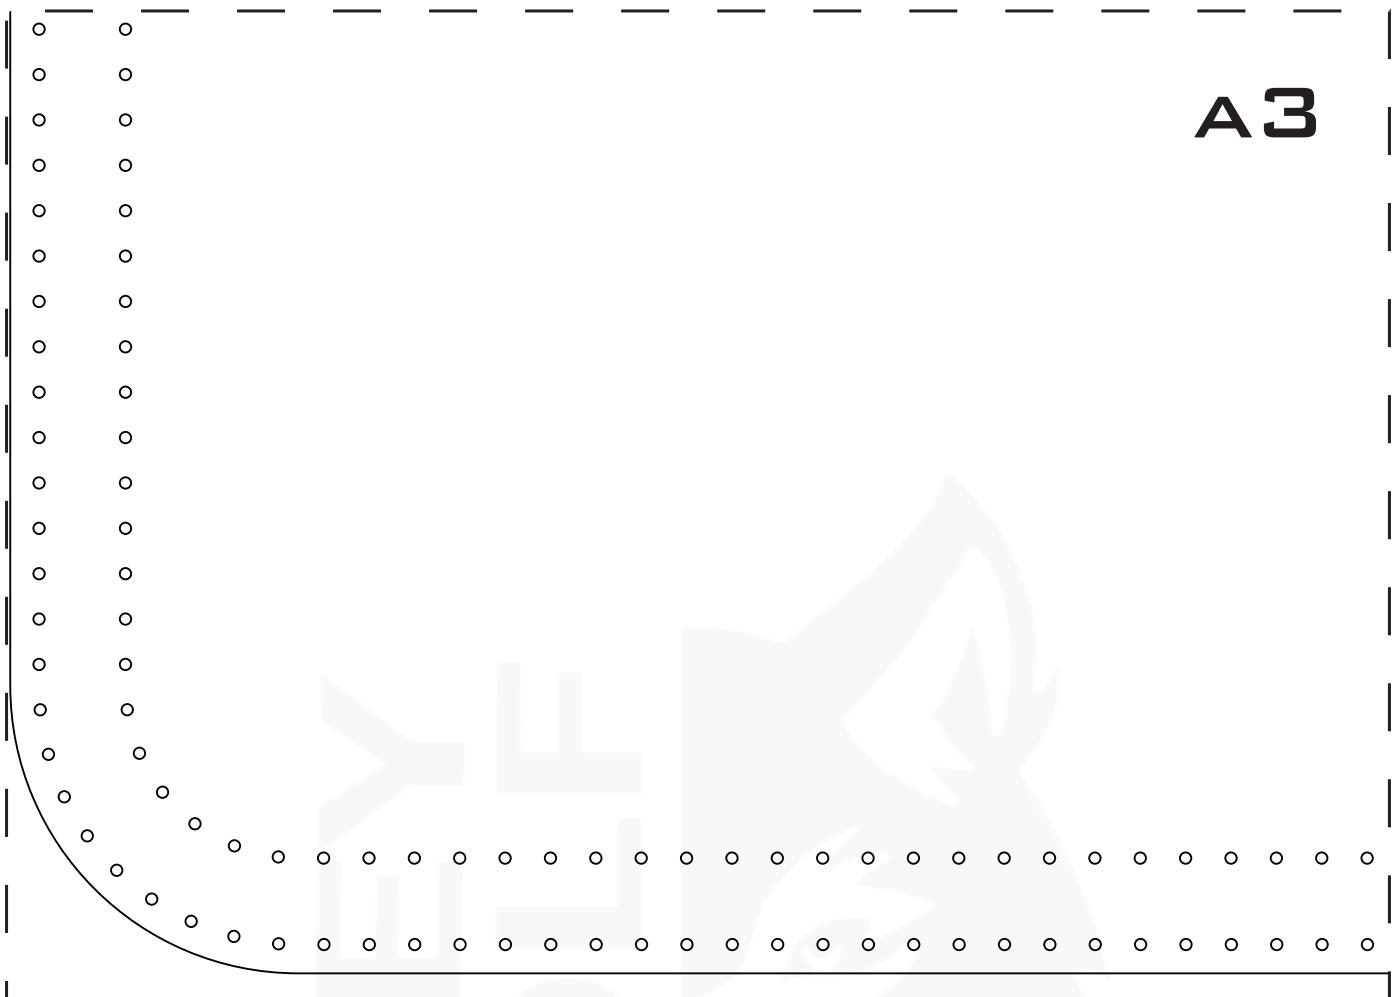

**G 1**

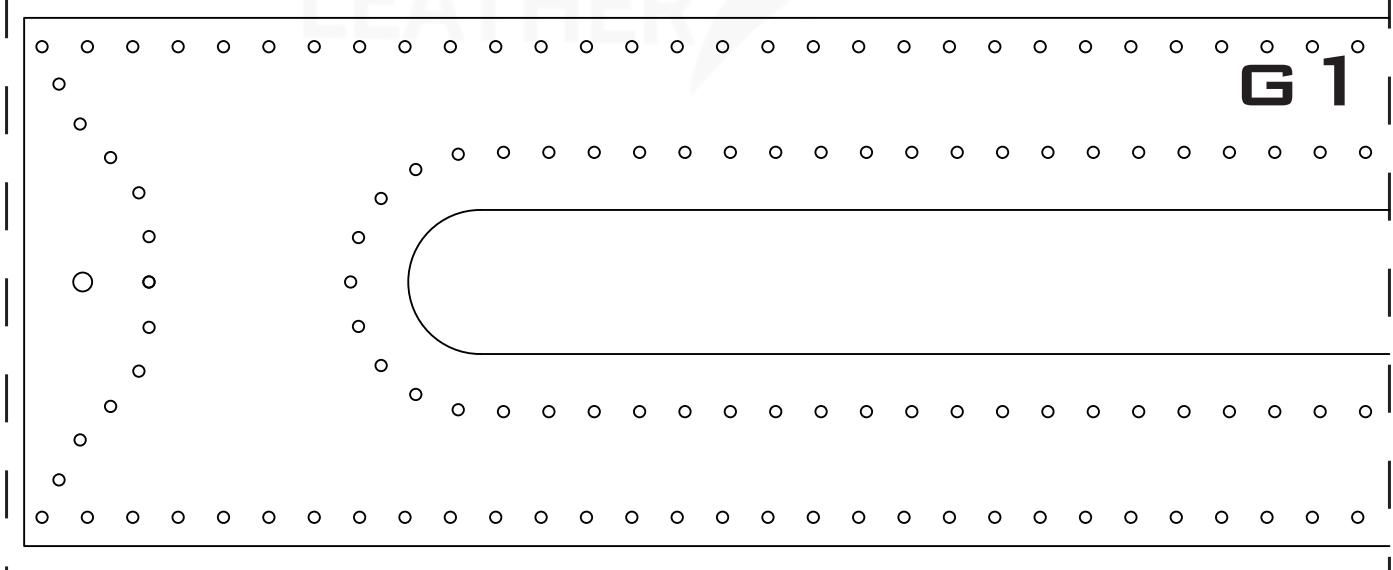

**A4**


**B2**

**D RING HOLDER**


**G2**

**TOP GUSSET**


**C3**

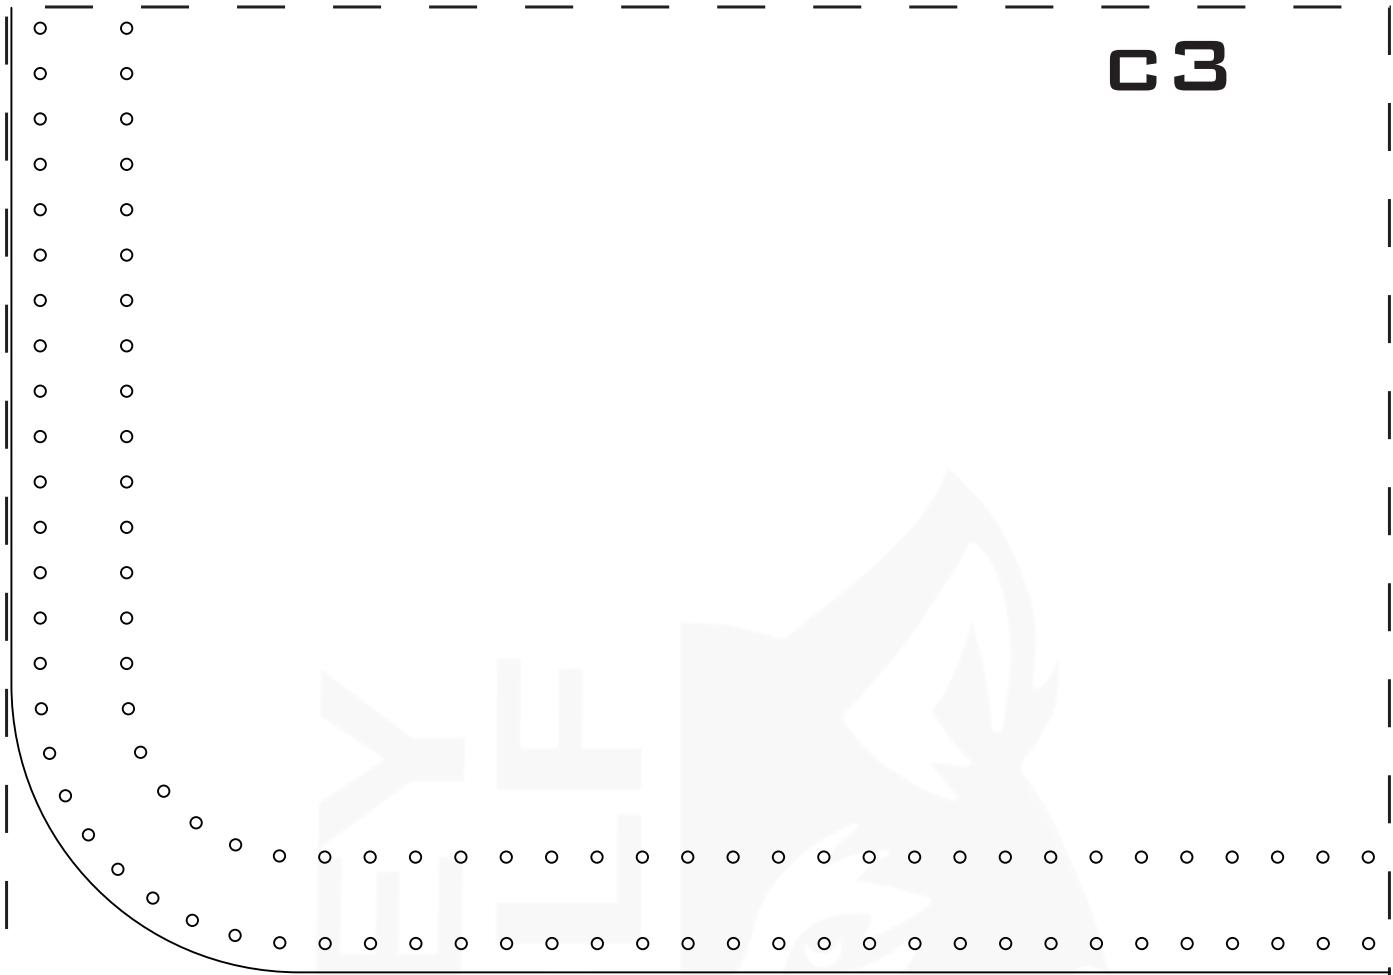


**D RING HOLDER**

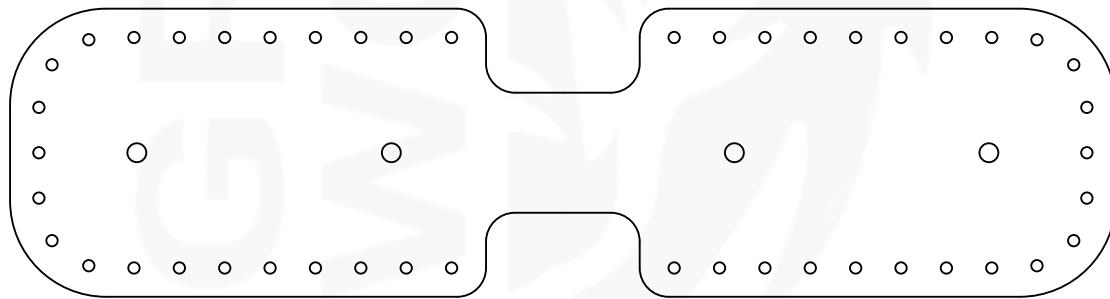


**G3**

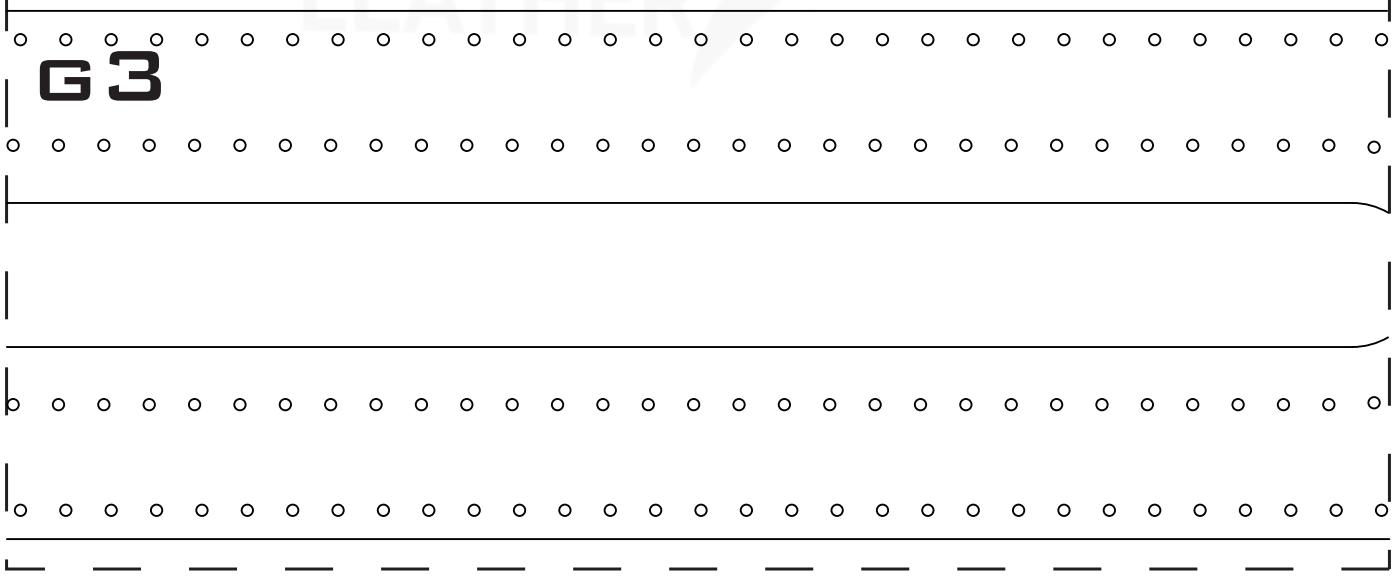

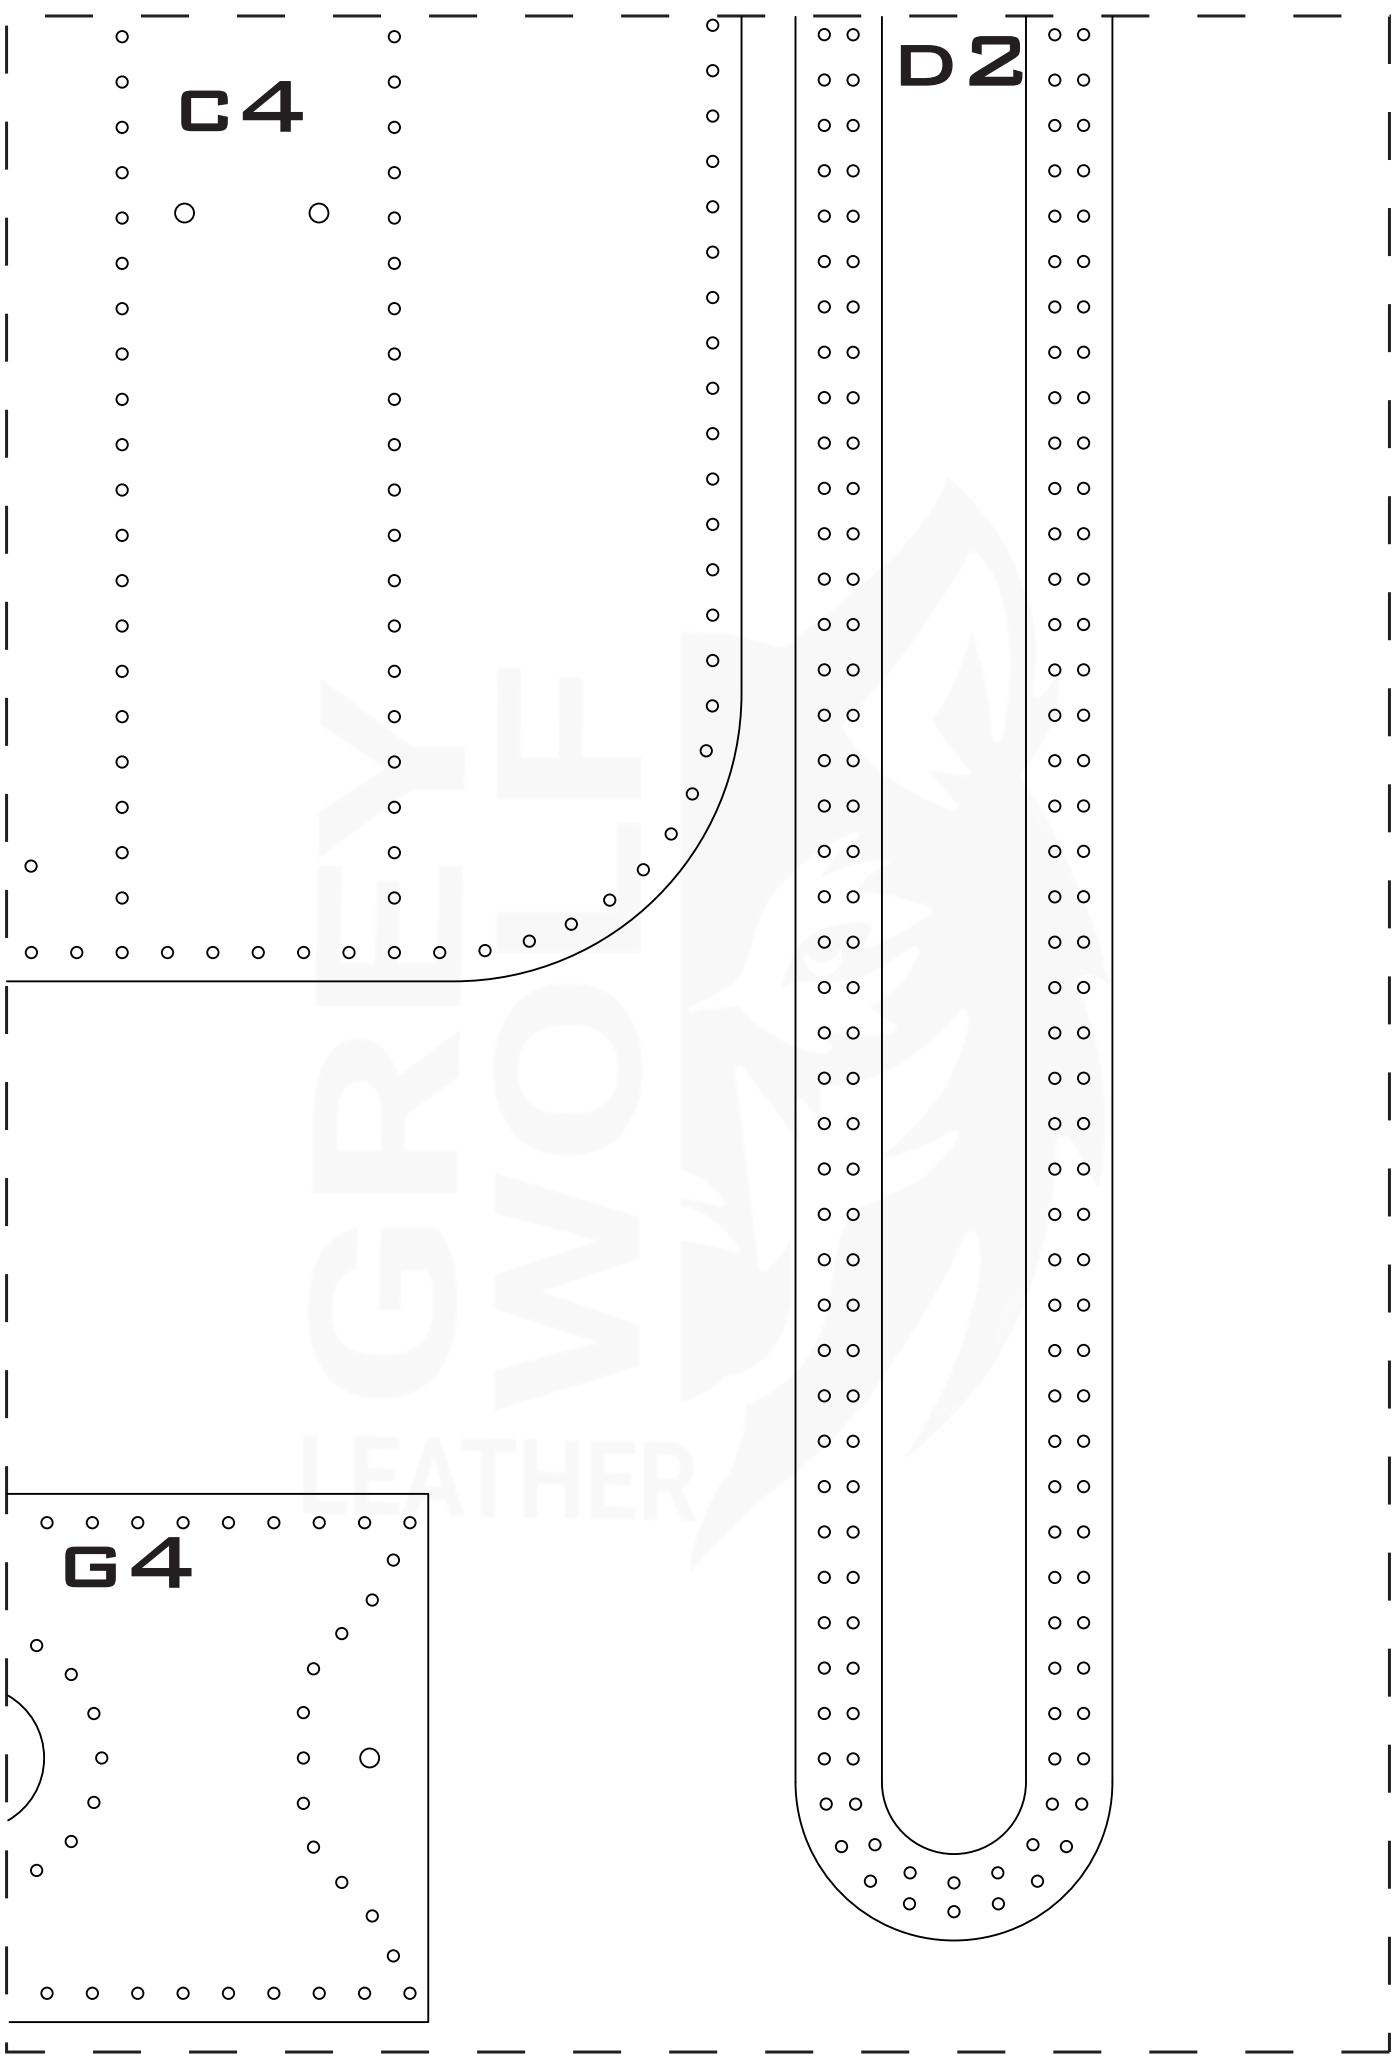


**I** 1


## BAG FACE STRAP SUPPORT

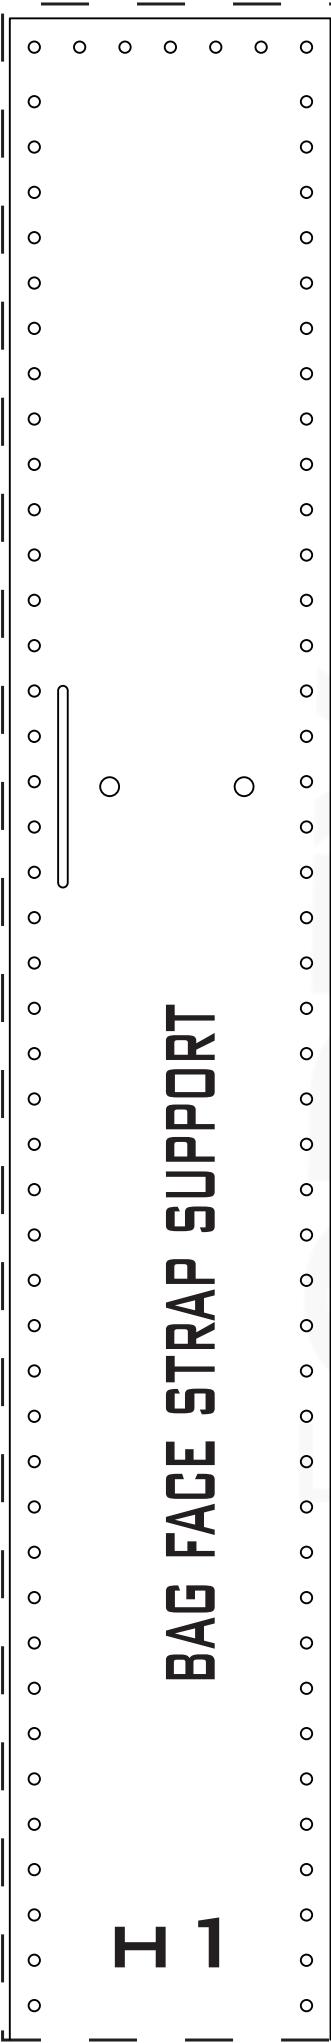


**I** N

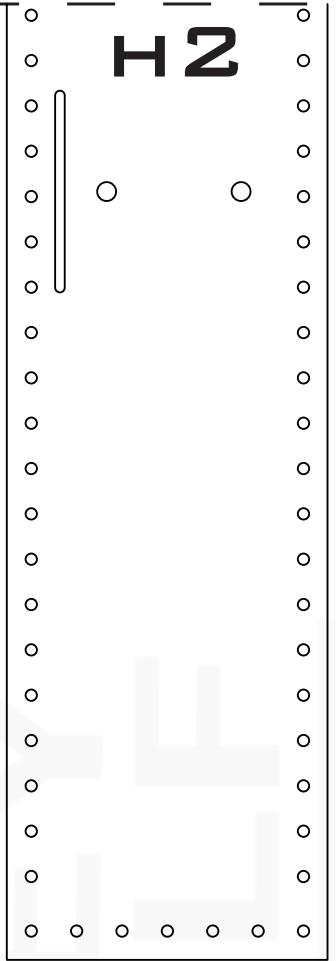


**I** N



## HANDLE INTERIORS



**J** 1



K 1

INTERIOR LAPTOP  
SLEEVE

**HANDLE**

**M 1**



**M 2**

**HANDLE**

**Z 1**

**Z 2**


**K2**

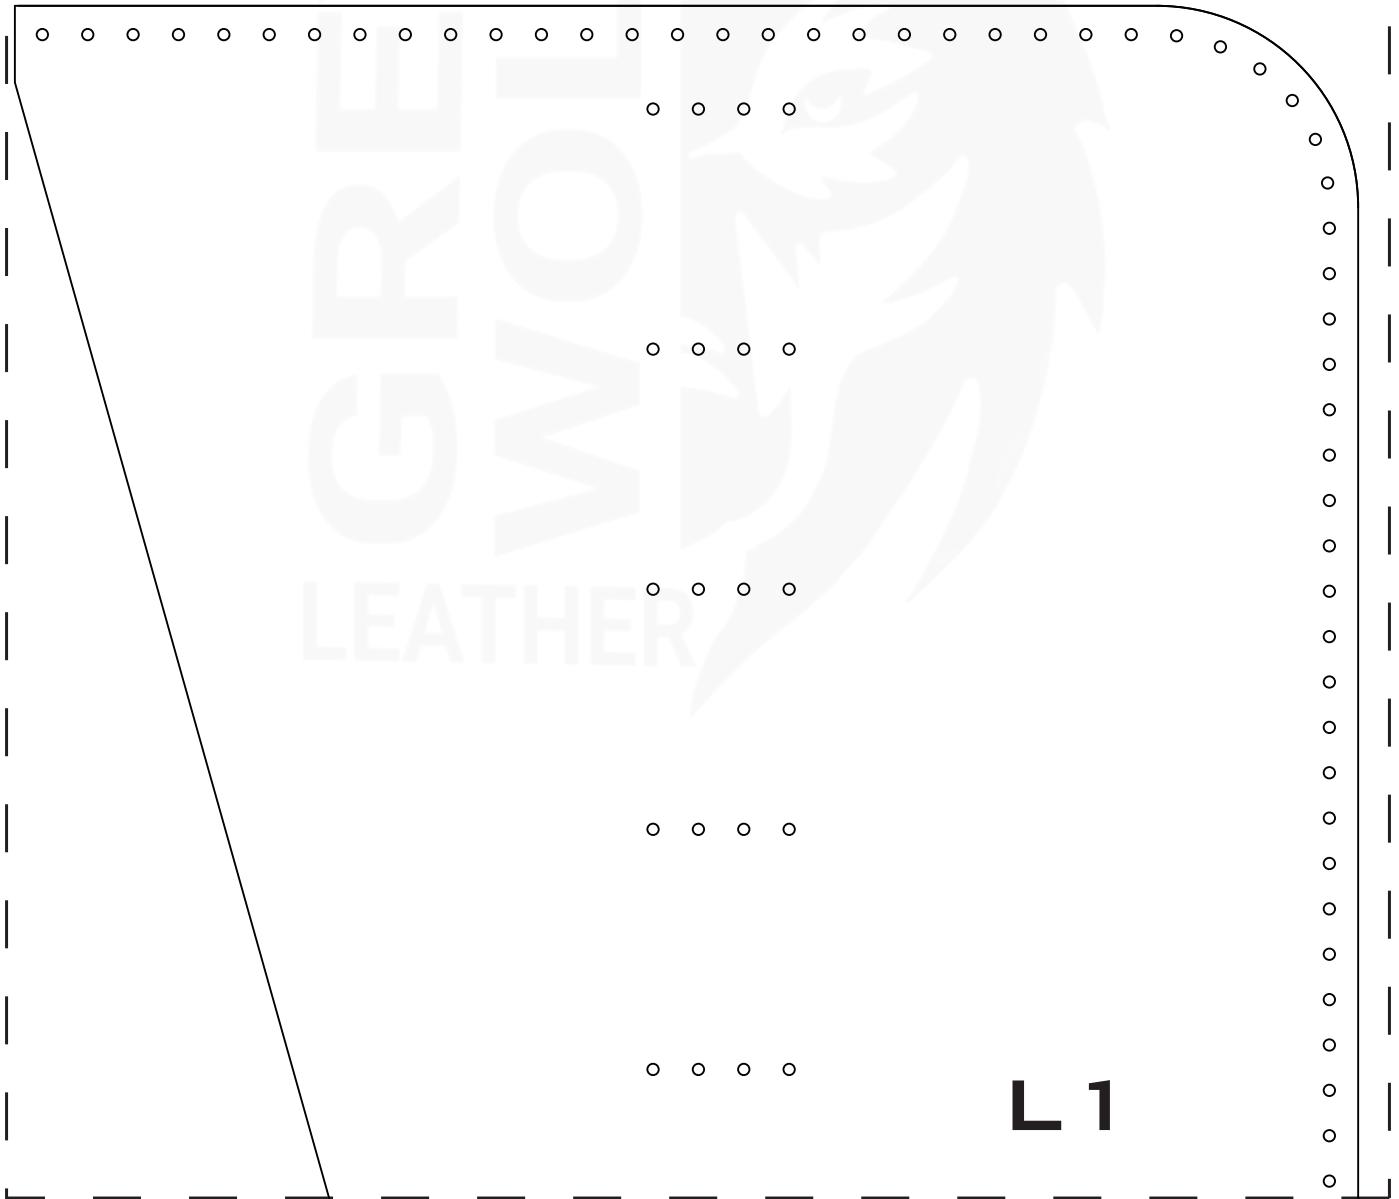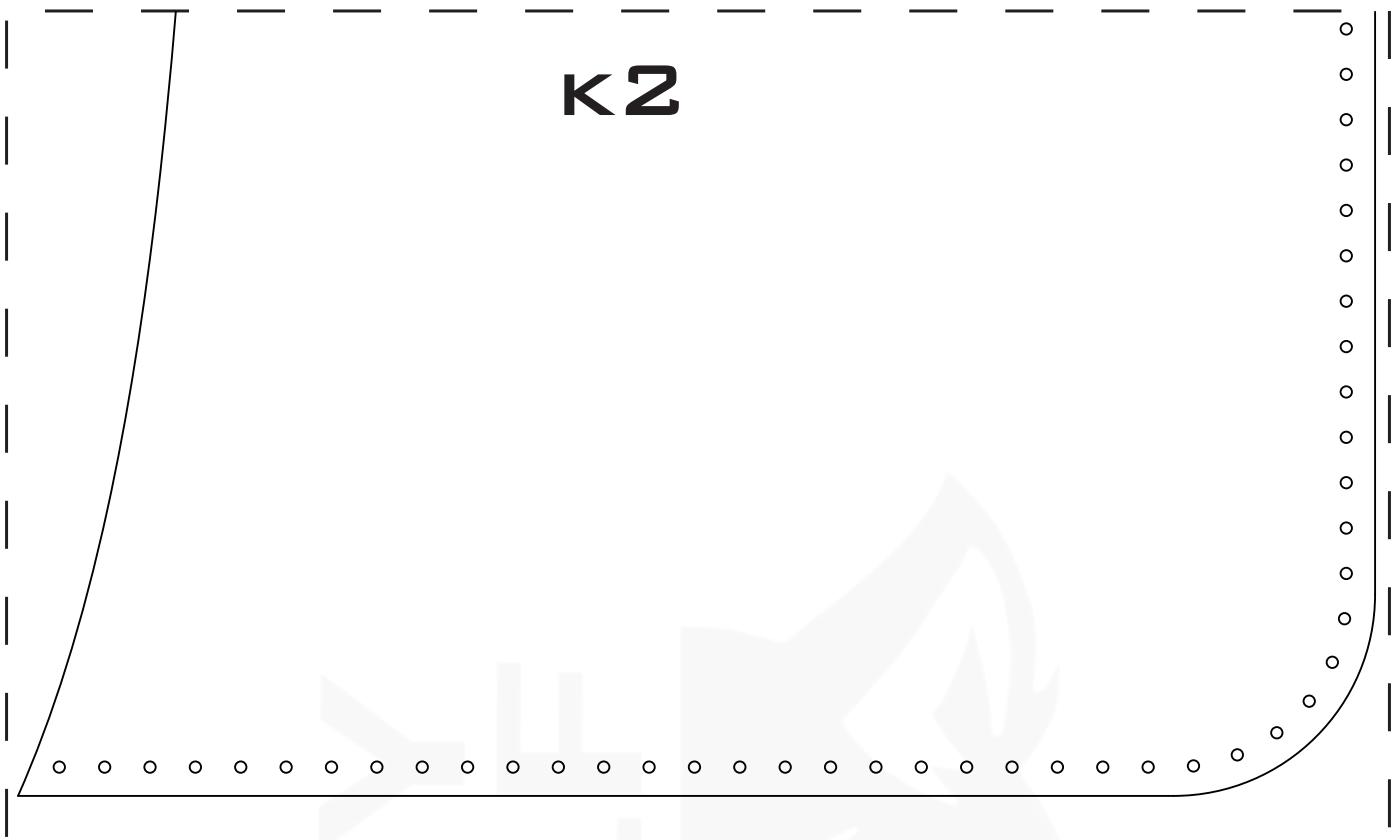


**L 1**

L2

INTERIOR POCKETS

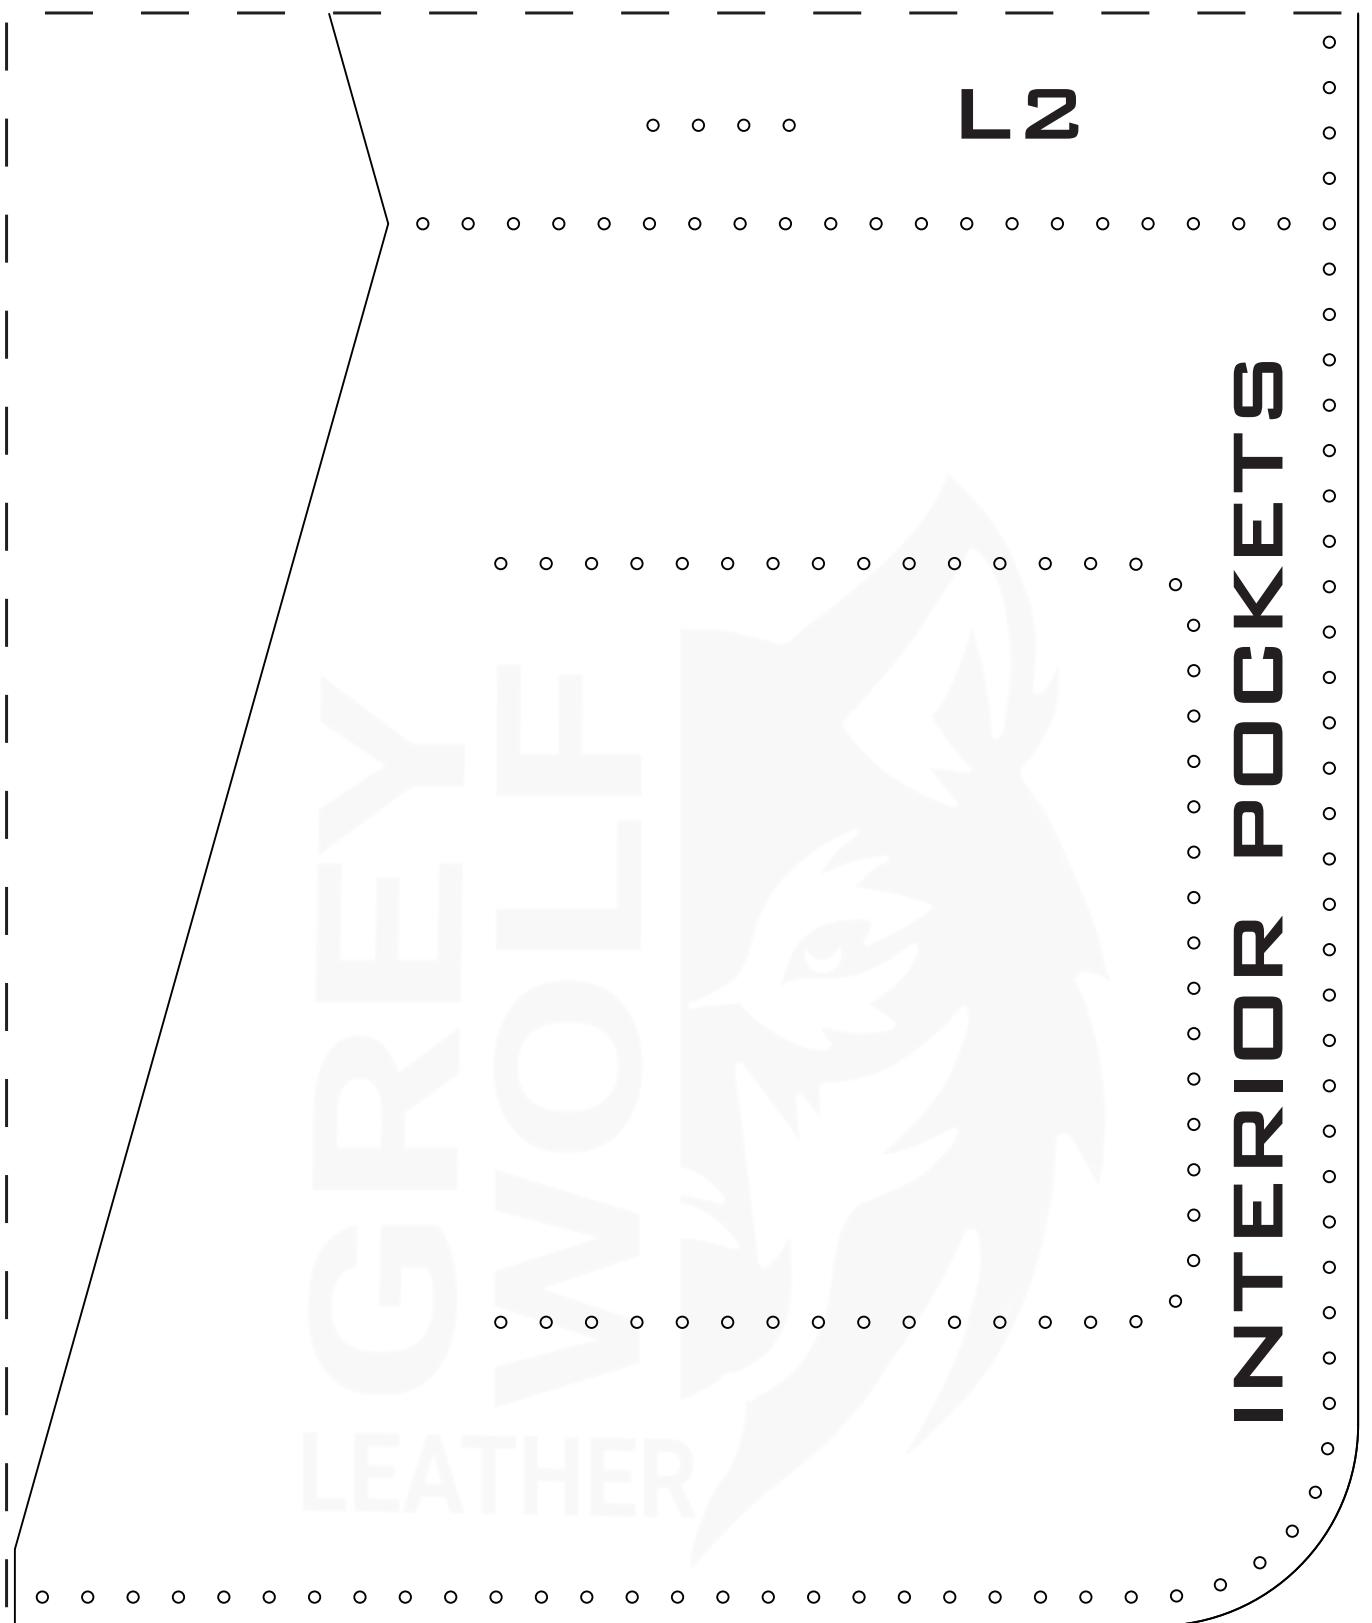

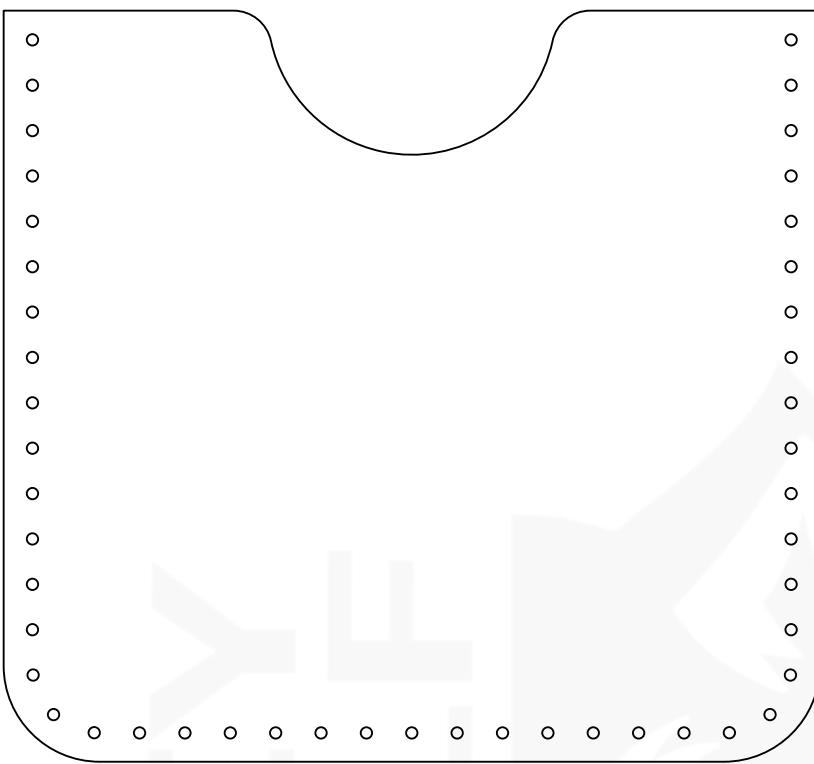

GROWTH  
LEATHER

7.2 INCHES  
182.88 MILLIMETERS

# CALIBRATION PAGE

1. OPEN IN ADOBE ACROBAT
2. PRINT TO "ACTUAL SIZE" IN PRINTER OPTIONS
3. PRINT CALIBRATION PAGE TO VERIFY PROPERLY SET UP PRIOR TO PRINTING THE PATTERN.

10.6 INCHES

269.24 MILLIMETERS

